





Network Type : LV

## Installation tester CATEX

## **Application:**

The CATEX testers enable you to perform the following checks:

- Presence of voltage at the terminals of a socket.
- Integrity of the earth circuit.
- Correct polarity. The position of the phase and the neutral is indicated.
- Correct operation of the RCD system at the following sensitivities: 10 mA, 30 mA, 300 mA, 500 mA, 650 mA.

The RCD check function is only applicable to single phase circuits:  $230\ V$  between phase and neutral.



## Features:

- Operating voltage: 230 V ± 10%.
- Frequency: 50 / 60 Hz ± 10%.
- Operating temperature: 15°C / + 45°C.
- IP 40 IK03.
- · Fuse protection: 2 delayed fuses 250 mA
- CAT II 600 V

## **Optionnal accessories:**

• M-952271 : cord for intervention on LV tables.





Référence	Frequency	Weight (kg)
DT-155	50/60 Hz	0,16

**Last Modification**: 04/20/2025

